

Saveris 2 – logger programmeren via Wireless Network

1. Press the data Logger communication button for about 10 Seconds (when you hold button for 20 seconds you factory reset it):




2. On the lower Right corner menu, click on your computer on the "Wireless Networks" icon:



3. Select the Wireless Network with the name: **Saveris2 SN: XXXXXXXX**:
For example: Saveris2 SN:55602962.



4. The communication with the data Logger Network will be established:

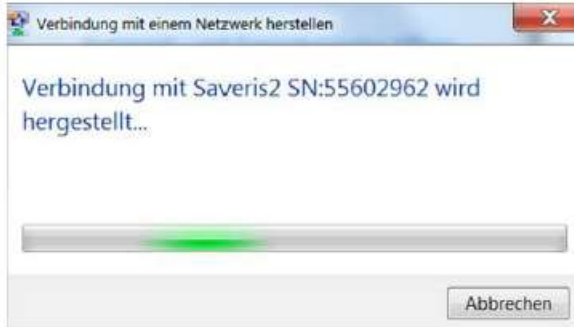

5. Open an internet browser and type: 192.168.1.1



6. Then you will be directly connected to the Data Logger:

