

How to read the Data Logger Error Code with computer connected to logger in hotspot mode


1. Press the data Logger communication button for about 10 Seconds (when you hold button for 20 seconds you factory reset it):




2. On the lower Right corner menu, click on your computer on the “Wireless Networks” icon:




3. Select the Wireless Network with the name: **Saveris2 SN: XXXXXXXX**:
For example: Saveris2 SN:55602962.

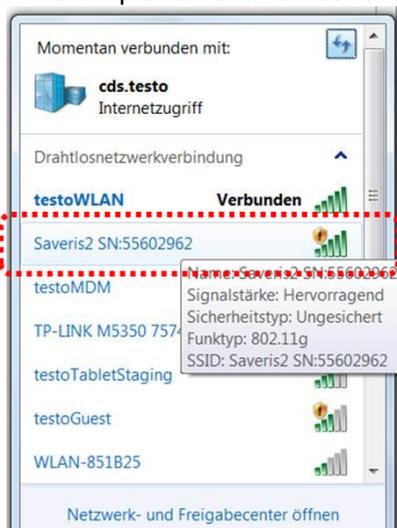


4. The communication with the data Logger Network will be established:

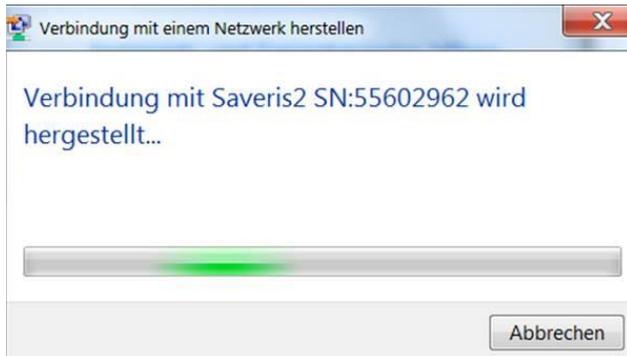


5. Open an internet browser and type: **192.168.1.1**

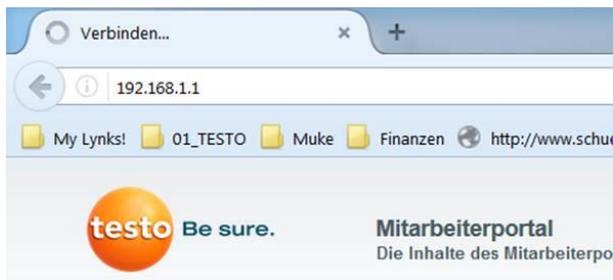


6. Then you will be directly connected to the Data Logger:

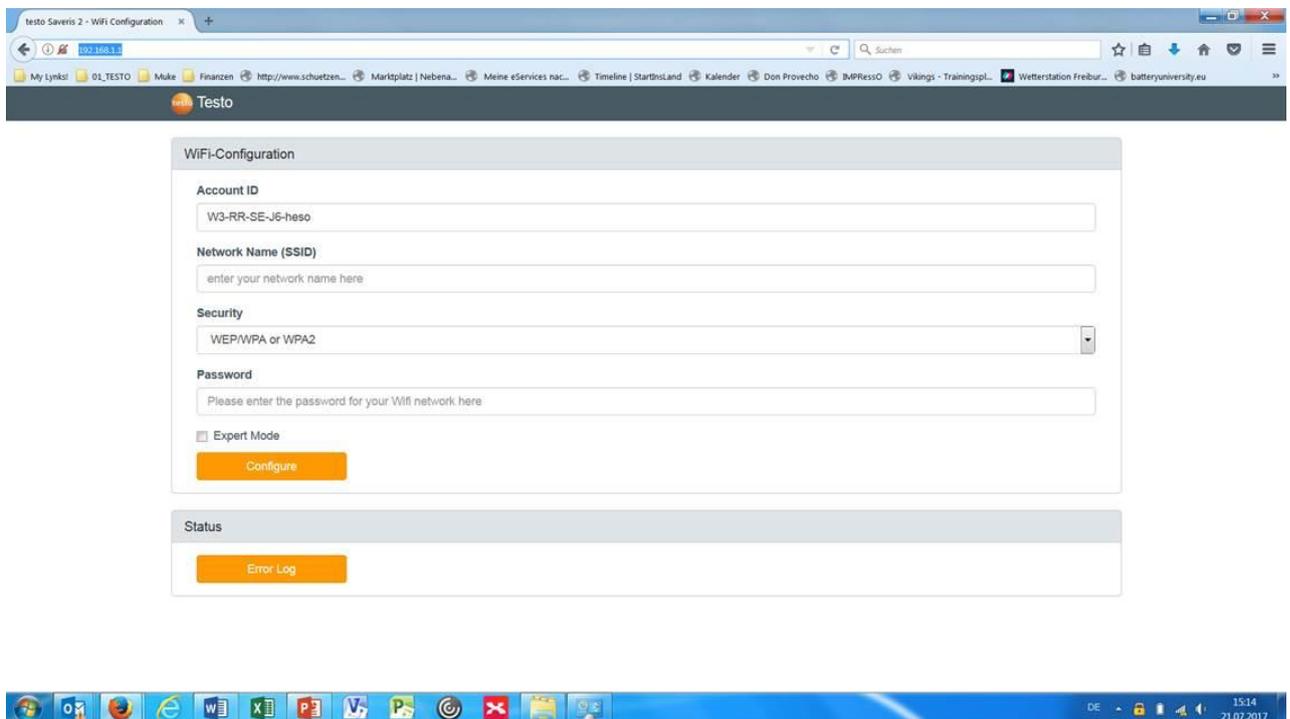

7. Click on „Error Log“ in order to see the Data Logger Error Log information:

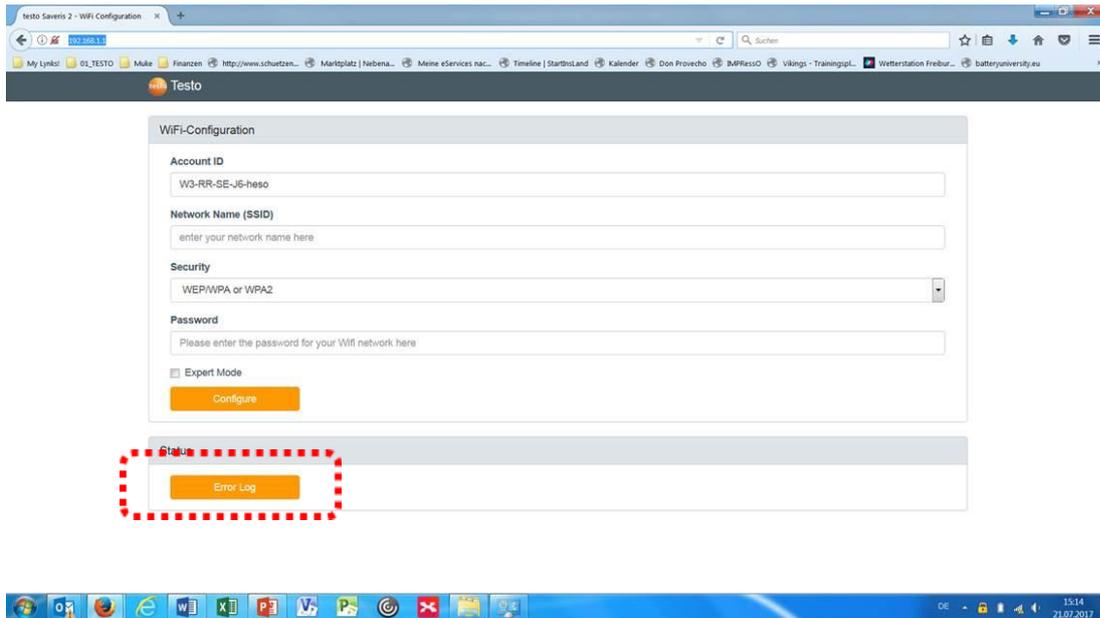

8. Click on „Next Page“ until you see the latest “Error Log Message”

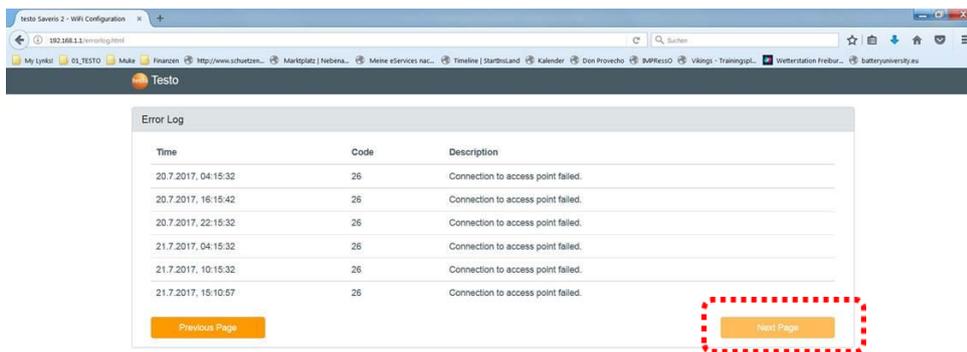

9. You will see the latest Error Code. In this example, “**Error Code 26 – Connection to access point failed**”

